Garment Steamer 콘에어 스팀 다리미







CONAIR GARMENT STEAMER

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

• **WARNING:** The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.



- 1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- . If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 4. Do not use the unit if it has fallen or if it appears to be
- 5. Do not leave the unit unattended when it is plugged in or switched on
- 6. Unplug the unit immediately if you have problems when
- using it. 7. Do not use any accessories other than those recommended by manufacturer.
- 8. Unplug the unit after each use and before filling o
- 9. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.
-). Allow the unit to cool before storing.
- 1. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- When emitting steam, this appliance may cause burns if it is used too close to the skin or eves, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use v holding it away from the body.
- Do not steam garments while on a person.
- 14. Always keep the hose and nozzle elevated above the water container.
- 15. Burns could accur from touching hot metal parts, hot water or steam. Use care when you turn steam appliance upside down.

- 16 Do not operate steamer without correctly filling the water container. Only use clean cold water for filling this appliance. In hard water areas, we recommend the use of distilled water.
- 17. Use of an extension cord is not recommended. If an extension cord is absolutely necessary, a 13-ampererated cord should be used. Cord rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

STEAMER ASSEMBLY

STEP 1 – Assembling the Support Rod(household use only)



. Insert pole with bigger diameter side into receptacle in base (Fig. a)



2. Slide plastic connector onto it and fix the connector tightly (Fig. b



3. Open the locking tab and pull out the telescope pole totally (Fig. c)



4. Lock up the tab (Fig. d)



5. Slide hook into the top of the pole (Fig. e)





OPERATING INSTRUCTIONS

Remove the water container with the handle and turn upside down. Unscrew the valve in the center of the base. Fill container by holding container under a source of running cold water until the container is filled to the desired level. Do not overfill. Screw the valve cap onto the water container and return the container to the upright position. Place the water container onto the base and make certain it is seated properly in the cavity.



STEP 2 – Attaching the steamer Hose Assembly process:

1. Align to unlock arrow 2. Press 3. Turn clockwise till align to lock arrow



Removing the Steamer Hose (make sure unit has been cooled) Disassembly process:

BEFORE FILLING THE WATER CONTAINER

Turn the water container upside down and inspect to make sure the valve and spring assembly are functioning. Place the container in the reservoir and check that it is seated securely. If the container has been stored with water inside, it may be necessary to remove the water and clean the container. Follow the steps for care and cleaning.

FILLING THE WATER CONTAINER (PRIOR TO PLUGGING IN THE APPLIANCE)

DO NOT FILL THE CONTAINER WITH HOT WATER GETTING TO KNOW YOUR STEAMER

OPERATING THE STEAMER

1. Make sure all hose connections are secure and tight.

- 2. Make sure the rod is fully assembled and the hose is not twisted
- 1. Turn the switch to the "O" position and unplug from the power SOURCE 2. Wait for the steamer to cool completely for at least 30 minutes.
- 3. Unplug power cord and gently wrap abound built-in cord wrap
- for storage. 4. Remove the steamer hose.
- 5. Remove the water container from unit, unscrew valve and empty unused contents. Allow to air dry.
- 6. Remove excess water from the reservoir by lifting the unit and pouring into a sink.
- 7. Replace water container.
- Store the unit.

OTHER IMPORTANT NOTES

During operation, the steamer hose may gurgle. This is a normal result of condensation collection inside the hose. Simply lift the handle upward until the hose is extended to its full height. The gurgling will stop when the excess moisture inside the hose has had a chance to drain back into the base.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, stops producing steam and then starts again, you may need to decalcify your steamer.

Decalcification refers to removing the calcium deposits which form over time on the metal parts of the steamer.

For best performance, decalcify the unit from time to time .The frequency depends upon the hardness of the water used and frequency of use.

To decalcify, fill the water tank with a solution of 1/3 white vinegar and 2/3 water and replace the tank into its cavity in the steamer housing. Place the attachment head over a sink and switch the steamer to 'II' run until half the amout has steamed(1 liter). Turn the steamer to the 'O' positon, unplug from electrical outlet, and allow to stand for 30 minutes.



Unscrew the drain hole cap on the base, and then place the main unit at normal operation position, insert the water tank into the base that water will drain out from the drain hole and bringing with limescale. Finally, fastened up the drain hole cap.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2-3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water after the completion of decalcification before using the steamer again to steam garments.

HOW TO STEAM

Grasp the steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles, slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack, Heavier fabrics may require repeated steaming. Repeat as necessary with practice, you will gain speed and efficiency, You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet or silk with the steam head.

Always steam with hose in upright position, so any condensation

is free to flow back into the steamer. If you steam with hose not upright, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

TO STEAM DRAPES

Wash and dry drapes as directed according to fabric type. Re-hang drapes and steam drapes when in place.

ROUBLE - SHOOTING THE STEAMER

PROBLEM	CAUSE	SOLUTION		
Steamer fails to heat	Steamer not plugged in	Plug into electrical outlet		
No steam	Water level is low	Turn switch to "O" and refill water container		
Water drips from nozzle	Condensation in hose	Hold the hose vertically and allow water to drain back into unit		
Nozzle gurgles	Condensation in hose	Hold the hose vertically and allow water to drain back into unit		
Poor steam performance	Sediment in container	Decalcify reservoir and water container		
Note: Minerals in water will vary in different areas. To insu				

Note: Minerals in water will vary in different areas. To insure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and



or kinked.

- 3. Plug the power cord into a normal electrical outlet.
- 4. Turn the switch to the "I" position or "II" position for high or low steam rate.
- 5. The indicator will light to indicate when power is on.
- 6. Steam will be produced from the nozzle in about one minute. Caution: Hose will be hot when in use. Avoid prolonged contact.
- 7. Should the water container run out of water, the unit with automatically turn on and off, cycling the indicator lamp on and
- 8. Switch off the unit for end of use or refilling the water container for reoperation.



removable 2.5 lite

water tank with

integrated came handle

triangular nozzle

water container.

ONE YEAR LIMITED WARRANTY

This Conair Appliance is guaranteed for consumer use for one year. Please fill in and return the Warranty Registration as instructed or log into www.conair-asia. com to register. This guarantee is no longer valid in case of alteration or repair by any unauthorized persons and only covers defects under normal use from the date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, it will be repaired or replaced under guarantee through the Conair Service Centre. Conair reserves the right to amend terms and specifications without prior notice. To obtain service under this warranty, please send in registration within one month of purchase through either one of the following ways.

THE DATE CODE MENTIONED

WWYYXXX was mentioned on unit as manufactured date so you can see W as week and Y as year for your reference.

CONAIR CUSTOMER SERVICE:

35/F., Standard Chartered Tower, Millennium City, 388 Kwun Tong Road, Kwun Tong, Kowloon, Hong Kong Conair Customer Hotline: (852) 2751 4604 E-mail: email asia@conair.com Website: www.conair-asia.com

CONTINENTAL CONAIR LIMITED CHINA CREATIVE DEPARTMENT

Date	04/29/2014
Customer	CKTL
Model No.	CGS28GK
Description	IB
Job No.	14CF004
Reference No.	IB-13/392A
Revision No.	0
Color	1C+1C(Black)
Open Size	920mm(W) X 214mm(H)
Folded Size	92mm(W) X 214mm(H)
Material	80gsm Artpaper
Prepared by	Betty bai
Approved by	Jimmy Ng
Vendor	MILLPLAN
Supplier	BondFund

折叠方法 Folding method: 16 pages (8 x 2)



CGS28GK



콘에어 스팀 다리미 안전 주의사항

주요 안전 주의사항 제품 사용 시 특히 어린이가 있을 경우 다음의 안전 주의사항을 반드시 준수하셔야 합니다.

사용 전 반드시 사용설명서를 숙지하여 주십시오.

물에 접촉하거나 빠뜨리시면 안됩니다.

안전주의

주십시오.

• 경고: 제품 포장에 사용된 폴리에틸렌 재질의 포장재는 어린이가 사용할 경우 위험할 수 있습니다. 어린이의 손이 닿지 않도록 주의해



- 이 포장재를 유아용 침대 혹은 요람 등에서 사용하지 마십시오.
- 얇은 필름으로 인해 유아가 질식될 수 있습니다.
- 경고: 이 제품을 욕조, 샤워기, 개수대 등 물이 닿기 쉬운 곳에서 사용하지 마십시오.



- 1. 부득이 물이 있는 곳에서 사용하실 경우 사용 후 반드시 플러그를 뽑아 주십시오. 전원 스위치가 꺼져 있더라도 물 근처에서 사용하시면 위험합니다. 보다 안전한 사용을 위하여 욕실의 잔류전류 용량은 30mA이하여야 합니다. 욕실 등에서 사용 시 위 사항을 참조하여 전문가와 상의하시기 바랍니다.
- 2. 물 또는 액체에 절대로 빠뜨리시면 안 됩니다.
- 3. 전원코드가 손상되었을 경우 A/S 센터에서 반드시 수리를 받으셔야 안전합니다.
- 4. 제품을 떨어뜨리시거나, 제품이 손상된 것처럼 보일 경우 사용을 중단하시고 A/S센터에 연락하시기 바랍니다.
- 5. 전원을 연결하거나 스위치를 켠 상태에서 제품을 보관하지 마십시오.
- 6. 제품 사용 중 문제가 있을 경우 즉시 플러그를 뽑아 주십시오.
- 7. Conair가 공급하는 부속품 외의 부속품을 사용하지 마신시오
- 8. 제품 사용 후나 제품 세척 전에 반드시 플러그를 뽑아주십시오.
- 9. 본 제품은 영,유아, 어린이, 심신 박약자, 심신 상실자, 정신 질환자 등에 의해 사용되어서는 안 되며, 사용 시에는 반드시 보호자의 보호가 필요합니다. 특히 어린이가 장난감처럼 사용하지 않도록 각별히 보호해 주십시오.

10. 제품 보관 전 반드시 식힌 후 보관해 주십시오.

- 11. 전원코드의 손상을 막기 위해 꼬거나 구부려서 보관하지 말아 주십시오.
- 12. 스팀이 나오는 동안 눈이나 피부에 너무 가깝게 사용하실 경우 혹은 부적절하게 사용하실 경우 화상을 입으실 수 있습니다. 화상의 위험을 줄이기 위하여 제품 사용 전에 스팀의 작동상태를 몸에서 멀리 떨어뜨린 후 확인하십시오.
- 13. 옷을 입은 채로 다림질 하지 마십시오.
- 14. 스팀 노즐과 호스는 항상 물탱크보다 높이 들어올려 사용 및 보관하셔야 합니다.
- 15. 제품의 금속부분을 만지시거나 스팀에 직접 닿을 경우 화상을 입을 수 있습니다. 제품 사용 시 거꾸로 들지 않도록 조심해 사용하십시오.
- 16. 물탱크에 적정한 물을 채우지 않은 상태에서 제품을 사용하지 마십시오. 맑고 차가운 물만을 사용하셔야 하며, 물에 석회질이 많은 지역에서 사용하실 때에는 정수하여 사용하시기를 권장합니다.
- 17. 멀티탭의 사용은 권장되지 않으나, 부득이 사용하셔야 할 경우 13암페어 이상의 전류용량으로 허가된
- 멀티탭만을 사용하셔야 합니다.

조립방법 절차1— 지지대 조립 방법 (가정용)



1. 본체에 있는 투입구에 지름이 가장 큰 지지대를 삽입합니다. (그림a)



2. 플라스틱 연결부품을 튼튼하게 조입니다. (그림b)



3. 탭을 풀고 연장대를 전부 뽑아냅니다. (그림c)



4. 탭을 다시 잠급니다.(그림d)



5. 지지대 상단에 후크를 끼워 넣습니다.(그림e)



절차2- 스팀기 호스 연결 호스 조립 방법: 1. 호스의 돌출부를 풀림 화살표에 맞춥니다.

- 2. 2 삽입구에 눌러 넣습니다.
- 3. 시계방향으로 돌려 잠금 화살표의 위치까지 맞춥니다.



호스제거 방법 (반드시 냉각된 것을 확인하고 분해하십시오.) 1. 시계 반대방향으로돌려 풀림화살표에 맞추고, 2.당겨 뽑습니다



사용 안내

물통에 주입하기전에 물탱크를 꺼꾸로 놓고 밸브 및 스프링 조립부분이 정상적으로 작동하는가를 확인합니다. 물통을 저수부에 결합하고 결합상태를 확인합니다. 물통에 적량의 물을 넣고 사용하며, 사용 후에는 배수 후 물통을 깨끗이 유지합니다. 이하의 절차에 따라 물통을 세척,

CGS28GK IB-13-392A.indd 2

관리합니다.

물통에 물을 주입 (본체에 삽입하기 전에 진행) 손잡이를 잡고 물통을 분리하여 상부를 아래로 향하게 회전시킵니다. 본체 중앙에 있는 밸브의 너트를 풀어줍니다. 워터탱크에 깨끗한 물을 적정선까지 채웁니다. 물이 넘치지 만재선 이상으로 채워지지 않도록 주의하십시오. 물통의 밸브 캡을 조이고 용기를 바로 세우고 원 위치로 이동합니다. 물통을 본체 위에 올려 놓을 때 삽입구에 정확히 결합 되었는지 확인합니다.

물통에 뜨거운 물을 넣지 마십시오.

부품 설명서



스팀다리미 사용 방법

- 1. 모든 호스의 연결이 안전하게 결합되었는지 확인 2. 지지대가 전부 조립되었으며 호스가 비틀리거나 굽지
- 않았음을 확인
- 3. 전원플러그를 콘센트에 연결함
- 4. 스위치를"I"위치 혹은 "II"위치에 돌려 스팀 분사량을 조절
- 5. 전기를 접속하면 지시등이 점등함.
- 6. 노즐이 스팀에서 분사되기까지 약 1분 간 대기 주의: 사용과정에서 호스가 뜨거워지므로, 연장 연결하지 마십시오.
- 7. 워터탱크의 물은 반드시 저수부로 분출되어야 하며, 정상적일 경우 전원표시등 자동 활성화
- 8. 사용 완료 후 전원을 차단하고, 재사용 시 물통에 물을 재주입하고 계속 작업함

청결 및 보관

- 1. 스위치를 "0"위치로 돌리고 전원을 차단합니다.
- 2. 스팀기가 완전히 냉각될때까지 최소 30분간 기다립니다.
- 3. 전원 코드를 뽑고 제품 하단의 코드걸이에 가볍게 감아서 보관합니다.
- 4. 스팀기의 호스를 제거합니다.
- 5. 워터탱크를 본체로부터 제거한 후 밸브를 풀어 남은 물을 제거한 후, 자연 건조 시킵니다.
- 6. 본체를 들고 저수부에서 남은 물을 싱크대에 쏟아 제거합니다
- 7. 워터탱크를 원 위치에 놓습니다.
- 8. 제품을 보관합니다.

기타 주의사항

작업과정에서 스팀기의 호스에서 소리가 날수있습니다. 이것은 자연스러운 현상이며 호스내부의 열의 전달 과정에서 발생하는 소리입니다. 손잡이를 수직으로 들고 전체호스를 끝까지 위로 들면 소리가 멈추게 되며 호스 속의 잔류 스팀이 본체로 다시 흘러 들어가게 됩니다.

석회질 제거

만약 스팀 발생량이 평소보다 줄어든 경우 사용을 잠시 멈추었다가 다시 사용합니다. 혹은 물을 충분히 주입한 후에도 지시등이 물부족으로 깜박이는 경우, 스팀다리미의 석회질을 제거 하여야 합니다. 석회질 제거는 스팀기 금속 부분에 장기적으로 침적된 칼슘을 제거하는 것입니다. 양호한 제품 작동을 위하여 석회질을 수시로 제거하여야

하며 석회질 제거 주기는 사용된 물의 석회도 및 사용 회수와 관련됩니다.

석회질 제거 시에는 물탱크에 식초와 물을 1:3의 비율로 혼합된 물을 넣고 스팀다리미의 본체구멍에 맞추어 장착합니다. 기본노즐을 싱크대를 향하도록 한 후 스위치를 "II"로 돌려 워터탱크의 물이 절반 정도될 때까지 스팀을 분사시킵니다. (1L정도). 스팀다리미의 전원을 "O"로 돌리고 플러그를 뽑은 후 30분간 기다립니다.



베이스에 있는 배수구 캡을 풀고 본체를 정상 작업 위치로 놓고 워터탱크를 저수부에 삽입하여 물이 배수구를 통하여 배수되게 하며 석회질도 함께 방출시킵니다. 마지막으로 배수밸브를 잠급니다.

스팀 다리미가 정상적으로 작동될 때까지 위의 작업을 보통 2~3회 반복합니다. 각 각의 반복 작업 시마다 새로운 식초와 물을 사용합니다. 석회질 제거 작업이 끝난 후, 스팀다리미로 다림질 작업을 하기 전에 깨끗하고 차가운 물을 이용하여 워터탱크의 물이 소진될 때까지 한 번 정도 작동시킵니다.

스팀 작업 방법

노즐을 작업자의 반대 방향으로 향하게 놓습니다. 편직물의 아래 부분부터 시작하여 스팀이 옷감의 안쪽 및 바깥쪽에 스며들 수 있게 하여 주름을 제거하고 옷감의 가장 아랫부분부터 윗부분 방향으로 노즐을 천천히 이동합니다. 노즐을 옷감으로부터 떨어뜨린 후 노즐을 쥐지 않은 손을 이용해 옷감을 평평하게 합니다. 일부 직물은 안쪽에서 다림질 할 때 가장 효과가 좋습니다. 이것은 옷감을 잘 펴주고 주름을 제거시킵니다.

주의: 눈에 쉽게 보이지 않는 부분을 활용하여 옷감의 탈색 여부를 확인하십시오. 막대에 걸려 있는 커튼, 타월 걸이에 걸린 냅킨, 손수건, 수건 및 두꺼운 옷감의 직물 등은 여러 번의 다림질이 필요할 수 있습니다. 필요에 따라 여러 번 사용해보면 다림질의 속도와 효율이 높아지며 각기 다른 옷감에 대한 다림질 방법을 알 수 있습니다.

스팀헤드를 실크 혹은 벨벳에 직접 접촉시키지 마십시오.

항상 호스를 위쪽으로 향하도록 사용하며 물이 자동으로 본체에 흘러 들도록 합니다. 만약 호스를 위쪽으로 향한 자세로 사용하지 않을 경우, 스팀이 호스 내에 머물게 되어 소리가 나거나 손잡이의 스팀 분사구에서 물이 떨어질 수 있습니다. 이러한 현상을 피하기 위하여 사용 중 가끔 스팀 손잡이를 위로 향하게 하여 충분한 높이로 자주 들어 올려 주셔야 합니다.

커튼 다림질 작업

커튼의 세탁 및 건조 후, 커튼을 걸어놓은 상태에서 다림질 합니다.

다음은 고장이 아닙니다

	문제점	원인	해결방법
	스팀기가 가열되지않음	스팀기의 전원 연결문제	전원 연결 여부를 확인하세요
	스팀이 나오지 않을 때	수위가 너무 낮음	물의 양을 확인하시고, 부족할 경우 보충하세요
	노즐에서 물이 흐름	호스 내에 증기가 너무 많음	호스를 수직으로 들어 올려 잉여량의 증기가 본체로 흘러 들어 가도록 합
	노즐에서 소리가 남	호스 내에 증기가 너무 많음	호스를 수직으로 들어 올려 잉여량의 증기가 본체로 흘러 들어 가도록 함
	적은 스팀량으로 다림질 작업이 잘 안됨	본체 내 쌓인 석회질의 양	석회질 청소 요망 (제품 설명서 내 "석회질 제거" 란 참조)

주의: 지역별로 물속의 석회질의 양이 다를 수 있습니다. 스팀기의 연속적인 작업을 확보하기 위하여 절대로 깨끗하지 않은 물을 사용하지 말아야 하며 저수부 및 워터탱크의 남은 물은 버려야 합니다.

1년의 보증 기간

콘에어의 제품은 소비자에게 1년의 보증기간 보장합니다. 본 제품은 공정거래위원회 고시 소비자분쟁해결기준에 의거 교환 또는 보상받을 수 있습니다. 이 보증 기간은 개조 또는 무 면허된 기술자에게 수리되는 경우에는 제외되며 구입일로부터 손상된 경우에만 유효합니다. 만일 제품이 만족하지 못할 정도로 작동하지 않는다면 부품이나 제조 시 결함이 있는 사유로 콘 에어 서비스센터를 통해 수리하거나 보증서와 함께 교체 하실 수 있습니다. 콘에어는 사전에 통보 없이 약관 및 사양을

변경할 수 있는 권리를 가집니다. 본제품의 서비스를 받으려면 구매 시 영수증이나 다른 구매의 증거물을 사용설명서에 명시되어있는 콘 에어 고객센터에 문의 주시기 바랍니다.

제조일 표기

제조일은 본제품에 WWYYXXX 형태로 표기되어 있습니다. W는 '몇 째 주', Y는 '몇 년도' 를 나타냅니다.

수입 판매원

콘에어코리아트레이딩 주식회사 서울시 성동구 성수일로 4길 25 서울숲코오롱디지털타워 1차 2002호

A/S 대표 번호 : 1899-0209 또는 1544-6972 자사의 A/S 전문대행업체인 필일렉 www.fillelec.co.kr 의 홈페이지를 통해서 가까운 A/S센터(전국 38개점)를 확인하세요
